

Before Using The DSS-5000

- Completely read this Quick Start Guide and become familiar with the analyzer components.
- Fully charge the analyzer before using

 


IMPORTANT: For additional support go to:
support.dss5000.com


Controller



- 1 Carrying Handle:** For carrying the Controller and Tester Pod (when attached).
- 2 Controller Release Lever:** Press to release Controller from Tester Pod.
- 3 Power Button:** Hold for 2 seconds to turn the Controller on or off independent of the Tester Pod. Flashes when Controller is charging.
- 4 Touch Screen:** Primary user interface.

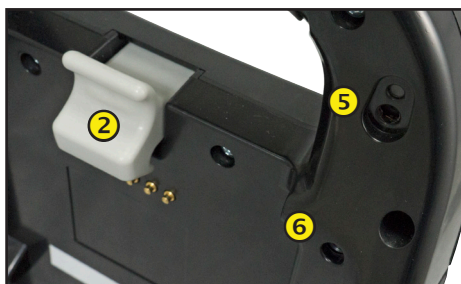

 - 5 Camera & Fill Light:** For VIN scanning and identification.
- 6 Temperature Sensor:** For measuring battery temperature.

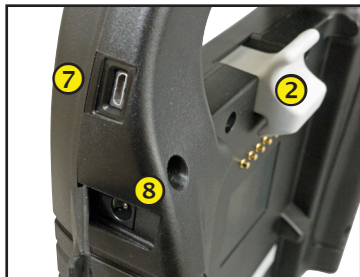

- 7 Micro-USB Port:** For updating and servicing the Controller when a WiFi network is not available.
- 8 Power Supply Connection**

Tester Pod



- 1 Accessory Connector (Optional):** For connecting an optional accessory (ex. Amp Clamp / DMM Cable) to the Tester Pod.
- 2 Controller Charging Contacts:** For charging and communicating with the Controller when mounted to the Tester Pod.
- 3 Status Indicator LEDs:**
 -  - Power is on
 -  - Clamps reversed
 -  - Tester Pod is communicating with the Controller
- 4 Integrated Printer (Optional):** For printing and sharing test results.
- 5 Clamp Storage Mounts:** Use to keep the test clamps protected when the tester is not in use.
- 6 Tester Pod Internal Batteries**

Charging Dock



- 1 Tester Pod Charging Contacts:** For charging the Tester Pod
- 2 Power Supply Connection**

Initial Power Up

1. Upon initial power-up, the Language Settings screen is displayed. Tap **Next** to continue.

System Language	Select the Controller default language displayed on the screen.
Test Result Language	Select the Controller default language for for all displayed tests and test results.
Email Language	Select the default standard language for the analyzer to use for all tests and results sent via email.
Print Language	Select the default standard language for the analyzer to use for all tests and results printed using a networked printer.

2. A consent to collect data screen is displayed. Tap the Consent check box and then tap **Next** to continue.
3. Using the displayed keypad template, enter the new user name and password.
4. Tap **Next** to continue.



IMPORTANT: By default, the first user created is assigned Administrator rights. Tap Add User to add additional users. See Chapter 10: Settings in the User Guide to change these defaults.

5. The Date/Time Settings are displayed. Tap **Next** to continue after making any adjustments.

Select Time Format:	12-hour or 24-hour format
Select Date Format:	DD/MM/YYYY, MM/DD/YYYY, or YYYY/MM/DD
Select Time Zone:	Time zone offset from Greenwich Mean Time
Set Date:	Set the current date
Set Time:	Set the current time in the selected time zone

6. The Test Settings are displayed. Tap **Next** to continue after making any adjustments.

Battery Rating	Default: CCA (Cold Cranking Amps)
Temperature Units	Select Fahrenheit or Celsius
Decimal Separator	Select decimal point or comma

7. A list of devices connected to the Controller is displayed.

To add a device, tap the plus (+) sign and follow the on-screen instructions. To unlink from a device, tap the displayed serial number to select it. Tap the trash can icon (🗑️) to delete it.



NOTE: A passkey number is automatically generated once the Bluetooth pairing has been established.

Tap the check box to require an Amp Clamp when performing a System Test.

8. A listing of detected Configured WiFi networks is displayed.

To select a network: For initial setup, no networks will be displayed here yet.

To add a network: Tap the plus (+) sign, then select from one of the displayed detected networks.

To manually add a network, tap the plus (+) sign again. Follow the on-screen instructions to select the Network SSID, Security, and IP Settings. Tap **Next** when finished.

Use the onscreen keypad to manually enter the Network SSID, security type, and IP settings. If necessary, enter the WiFi network password. Tap **Next** when finished.

A confirmation screen is displayed when the analyzer has successfully connected to the WiFi network.

To delete a network: Tap a displayed network to select it. Tap trash can icon (🗑️) to delete it.

9. The BMIS (Battery Management Information System) Account screen is displayed.

Tap **Yes** to connect the analyzer to an existing BMIS account. Enter a BMIS User Name and Password for the analyzer to use when transmitting test data to the BMIS database.

Tap **No** to skip this step.

10. The Email Address Book screen (Admin Only) is displayed.

To add an email address: Tap the plus (+) sign, then use the displayed keyboard to add the address.

To edit an email address: Tap the pencil (✎) icon, then use the displayed keyboard to edit the address.

To delete an email address: Tap a displayed email address to select it. Tap trash can icon (🗑️) to delete it.

To use the Default Email Server Settings: Tap the gear (⚙️) icon to use the default.

11. The Shop Information screen (Admin Only) is displayed

Use the onscreen keypad to enter the store name, address, and phone number. Tap **Next** to continue.


Store Name	Midtronics
Street Address	7000 Monroe
Street Address 2	
City	Willowbrook
State	IL
Zipcode	60527
Phone #	1-630-323-2800

12. The login screen is displayed.



13. Tap a user name to access the Main Menu.

 Main Menu

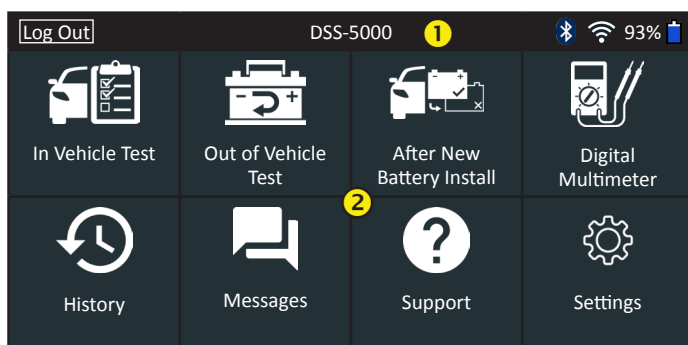


1 Menu Bar

Log Out	Log out current user	93%	Controller internal battery level
	Bluetooth connectivity status		Controller internal battery status
	WiFi signal strength		


2 Main Menu Selection Area

Additional Screens

 The dots at the bottom or side of a menu or results screen indicate additional screens are available. Use your finger to swipe horizontally left, right, up or down across the tablet screen to view all of the results.

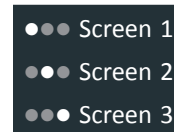

**Swipe
Horizontally**

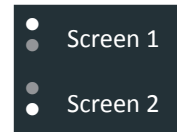 

**Swipe
Vertically**

Main Menu Icons

Icon	Description
In Vehicle Test	Automates battery testing for quickly testing vehicles using the fewest steps.
Out of Vehicle Test	For testing out-of-vehicle customer batteries for possible return.
After New Battery Install	For testing newly installed batteries in a vehicle. Also includes vehicle electronics reset information after battery installation.
Digital Multimeter	The Digital Multimeter included DC Volts, AC Volts, DC Amps, AC Amps, Ohms, Diode Drop, Amps Volts, and battery temperature for troubleshooting low voltage electrical circuits in a vehicle.
History	Access archived test histories or search test history by VIN or by technician.
Messages	Displays alerts and notifications for upcoming tests and activities including scheduled tests, tool software updates and maintenance opportunities.
Support	Access the analyzer Self-Test and a digitized version of the Instruction Manual that was shipped with the analyzer.
Settings	Setup/adjust: WiFi, printer setup, email settings, user information, default language, display and sound settings, BMIS information, shop information, and connected devices. Also access to tester software version information.

Recommended Test Procedure

The DSS-5000 testing process uses Conductance Profiling™ technology which determines battery cranking capability and also adds Reserve Capacity testing. With this additional process, initial battery analysis can take up to 60 seconds to complete.



IMPORTANT: Always begin each test by connecting the Tester Pod clamps to the battery being tested. The testing process begins as soon as the clamps are connected.

 
The DSS-5000 provides a battery decision along with additional detailed information on battery cranking and reserve capacity. Swipe the screen horizontally to the right or left to view the additional results screens. (See Page 3)

VIN Scanning


The DSS-5000 uses a camera built into the Controller handle to scan the VIN of the vehicle being tested. This number is then cross referenced with the original equipment manufacturer's battery specifications stored in the tester's database and displayed on the Controller screen.

Scanning Tips

- **Camera:** Located in the upper left portion on the back of the Controller handle.

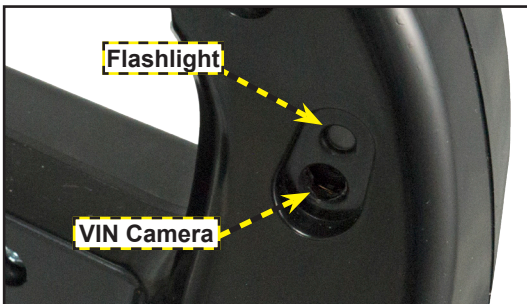

 - **Hold Steady:** Hold Controller steady when scanning the VIN barcode. This allows the user to clearly see the barcode and allows the camera to focus on it.

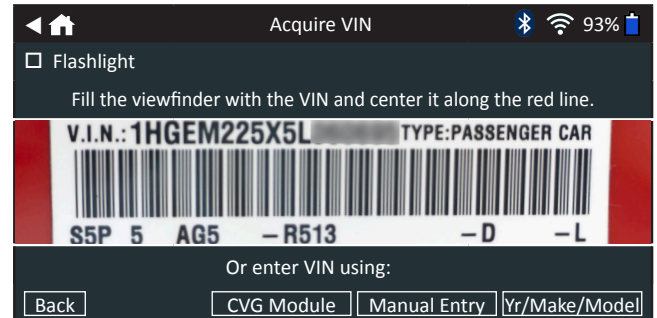

- **Fill Viewfinder:** Make sure the entire barcode is visible. Keeping the entire VIN barcode visible while slowly moving the camera closer or further away will help capture.
- **Clean Barcode/Window:** Surface dirt can interfere with the scanning process. If necessary wipe the VIN barcode with a cloth or your finger remove any surface dirt.
- **Lighting/Glare:** The built-in flashlight will automatically turn on in low light situations. If the flashlight, or sunlight, is shining directly onto the VIN barcode, try pivoting the camera up or down slightly to reduce any glare.

Corporate Headquarters

Willowbrook, IL USA
Phone: 1.630.323.2800
Canadian Inquiries
Toll Free: +1 1 866 592 8052

Midtronics b.v.

European Headquarters
Houten, The Netherlands
Serving Europe, Africa, the Middle East, and The Netherlands
Phone: +31 306 868 150

Midtronics China

China Operations
Shenzhen, China
Phone: +86 755 2374 1010

Midtronics India

Navi Mumbai, India
Phone: +91 22 2756 4103/1513
Asia/Pacific (excluding China)
Contact Corporate Headquarters
Phone: +1.630.323.2800